


DDR2 | DDR2-R

Dado Round Double Drinking Fountain

Installation Guide

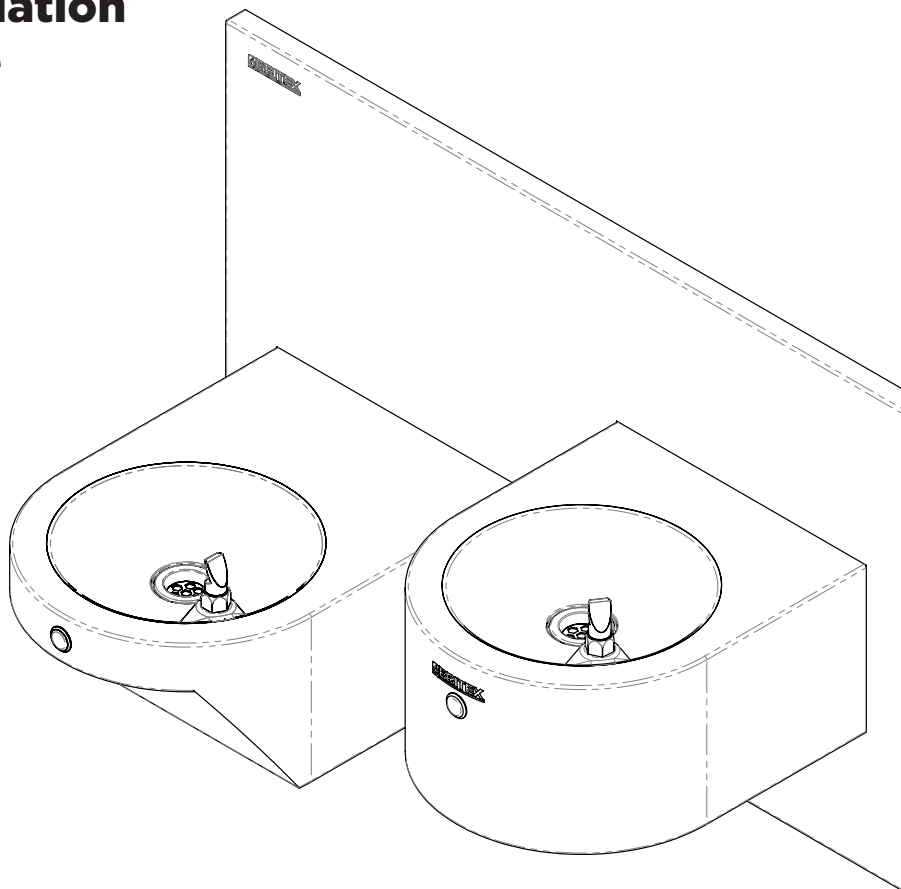

*Refrigerated and
Non-refrigerated*



MELBOURNE

Britex Place Mirra Crt
Bundoora VIC 3083
t (03) 9466 9000
e vic@britex.com.au

SYDNEY

16 Northumberland Drv
Taren Point NSW 2229
t (02) 9531 2100
e nsw@britex.com.au

PERTH

Unit 1/8 Principal Link
Malaga WA 6090
t (08) 9249 5464
e wa@britex.com.au

BRISBANE

19 Manila St
East Brisbane QLD 4169
t (07) 3363 2400
e qld@britex.com.au

ADELAIDE

The Britex Group
SA State Office
t 1300 764 744
e sa@britex.com.au

IMPORTANT

ALL SERVICE TO BE PERFORMED BY AN AUTHORISED SERVICE PERSON

Installation of this unit must be in accordance with AS/NZS 3500.1, AS/NZS 3500.2, the PCA and the local regulatory requirements. Water and/or electrical supply conditions must comply to national or state requirements and standards. Failure to comply shall void the product warranty and may affect the performance of the product. For further support and after-sales care, please contact Britex.

WARNING

WHEN INSTALLATION IS COMPLETE, ENSURE THESE INSTRUCTIONS REMAIN INSIDE THE PLASTIC BAG PROVIDED WITH THE UNIT FOR FUTURE REFERENCE

About

The BRITEX Stainless Steel Dado Double Round Drinking Fountain is a stylish, versatile fixture that incorporates both a standard and accessible drinking station. Dado drinking fountains come complete with front piezo timed flow Drink Safe™ low lead bubblers, splashback panel, waste outlets, mounting bracket and concealed access. Manufactured from commercial grade 304 stainless steel. Refrigerated models are supplied with a separate remote chiller unit for installation within wall cavity.

Preparation and Completion Notes

Contractors please note: Stainless steel drinking fountains should be installed after all other building activities that could cause contamination to the surface of the stainless steel have been completed.

These activities include:




Using proprietary building mortar removers containing hydrochloric acid. Welding, cutting and grinding that may 'spray' carbon steel and iron particles onto the stainless-steel surface.

1. Remove drinking fountain from box packaging and inspect for any damage before beginning installation process.
2. Confirm all requested details are correct.
3. If the drinking fountain is damaged in transit or if any details are not as requested, do not install it. Notify Britex immediately within 24 hours of receipting the product.

Technical Parameters

Inlet Connection	1/2" BSP Male
Recommended Inlet Pressure	350 kPa
Maximum Inlet Pressure	500 kPa
Water Supply Temperature Limitations	4-15°C

DDR2 Drawing (Non-refrigerated)

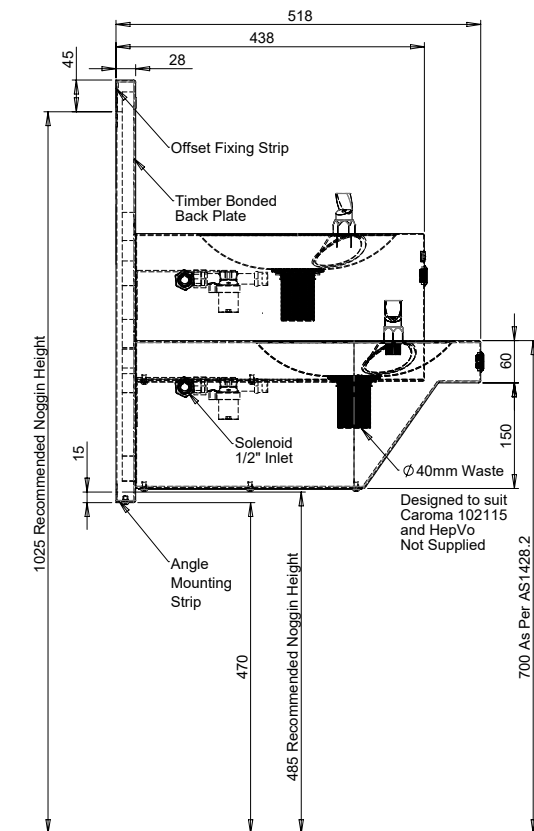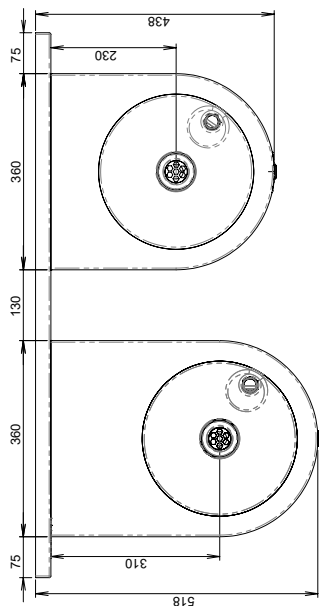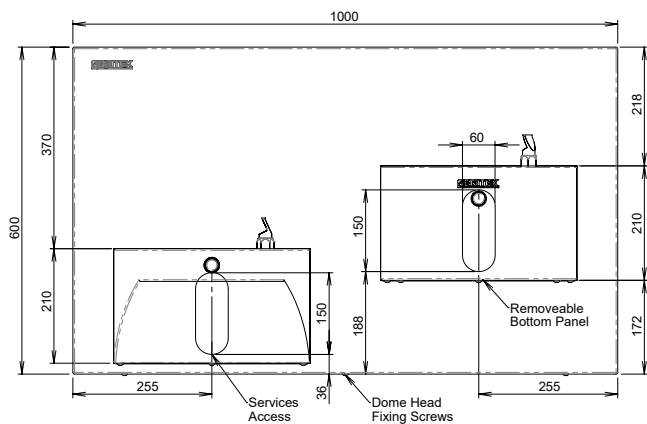

Installation Instructions

1. Place unit on wall and mark the top, ensuring top of basin is between 695 and 700mm FFL. Fix Offset Fixing Strip to wall.
2. Mark location for bottom fixing strip and fix to wall.
3. Place unit on the top fixing strip while holding the bottom of the unit away from the bottom fixing angle.
4. Push the bottom of the unit over the bottom fixing strip and insert the bottom fixing screws.
5. Now the plumbing for the waste can be installed and the mains will need to be attached to the unit.
6. Ensure the unit is not leaking once this is all done, the time flow bubbler should run for approximately 7 seconds.
7. Ensure all supply lines are flushed thoroughly to remove debris prior to installation (strainers are recommended if debris is an ongoing problem).
8. Two in-line filter to prevent debris fouling solenoid is recommended, this is supplied.

PLEASE NOTE:

This unit is preset and locked to flow for 7 seconds and cannot be adjusted.

PLEASE READ: This unit has an automatic 24 hour purge setting (hygiene rinse) to remove any stagnant water. This will reduce the amount of metals that may leach into the water from the plumbing system, and assist in minimising the growth of bacteria such as Legionella. This function is activated at the time the unit is first live (switched on). The unit will then automatically flush at this time if the unit has been inactive for 24 hours.


PLEASE READ: If this unit is preplumbed with your product please note that it has been tested and to flow for 7 seconds and will be installed with a blue ring.

PLEASE READ: Ensure all supply lines are flushed thoroughly to remove debris prior to the installation. Strainers are recommended if debris is an ongoing problem.


If you have ordered a refrigeration model, then below is the other steps that need to be carried out.

1. Place the refrigeration unit in the cavity, ensure there is a 10-amp standard power outlet.
2. This unit to be installed in a cavity not less than 700mm wide. A vent should be installed adjacent to the fan aperture. The remote unit must have 25mm at front and back of the unit, the unit can be installed flush against either side wall of the cabinet.
3. Unit is 'remotely' located whether that's in a cupboard space with adequate ventilation or in a janitorial/services room ideally adjacent to the fountain.

Installation Instructions

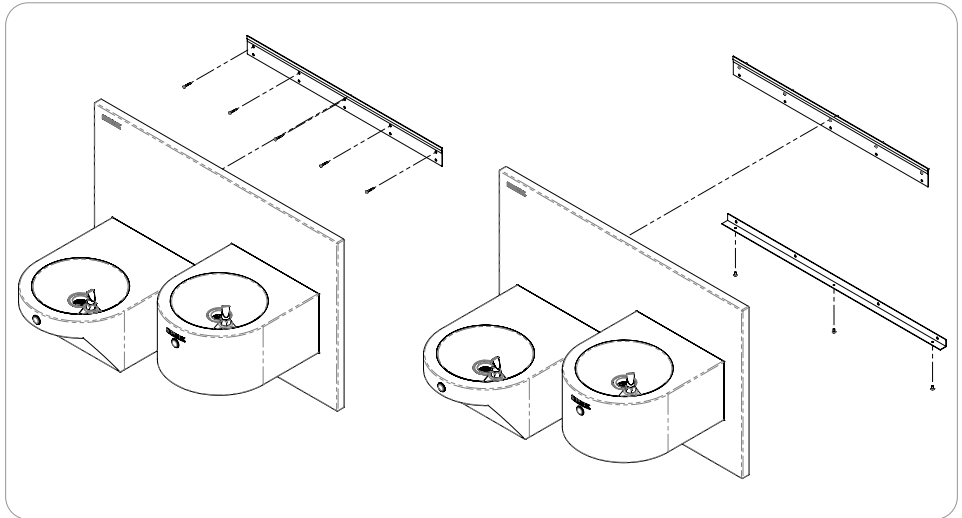

DDR2-R Drawing (Refrigerated)

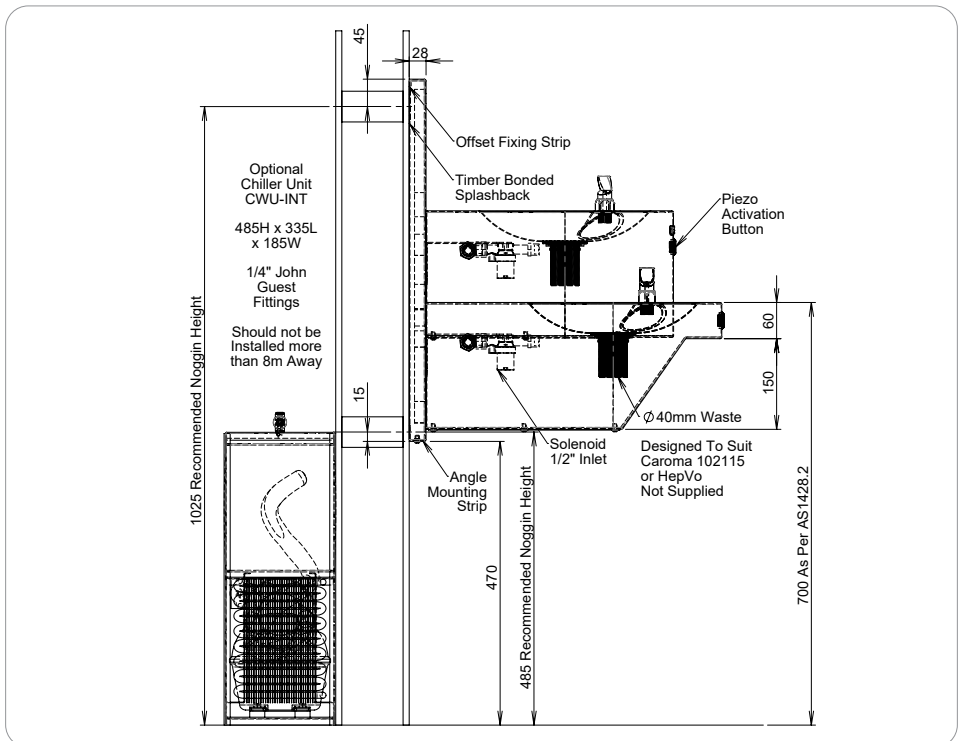

Specifications for Piezo Button

Inlet	G 1/2" BSP - Female
Outlet	G 1/2" BSP - Male
Working Pressure (kPa)	min 50 max 500
Working Temperature Range (°C)	min 5°C - max 60°C
Headwork	Solenoid Valve

How to Activate the Piezo Button



- Press the button once to activate.
- The water will flow for the set duration and turn off automatically.
- Alternatively press the button at any time to turn off.

Troubleshooting for Piezo Button (74-08-0105)

PROBLEM	CAUSES	ACTION
Inconsistent flow	Blocked flow regulator screw	Remove flow regulator screw and clean
Water is not flowing from tap	Water is turned off	Turn on water
	Blocked flow regulator screw	Remove flow regulator screw and clean
Rate of flow inadequate	The flow regulator screw may not be adjusted correctly	Remove blanking screw and adjust flow regulating screw as described above

Troubleshooting for DDR2

PROBLEM	CAUSES	ACTION
Water Not Cold	Loss of gas or failed fan	Contact manufacturer
Power supply to Chiller unit	No Power Supply	Turn on water
Inconsistent flow	Blocked flow regulator screw	Remove flow regulator screw and clean
Water is not flowing from tap	Water is turned off	Turn on water
	Blocked flow regulator screw	Remove regulator screw and clean
Rate of flow inadequate	The flow regulator screw may not be adjusted correctly	Remove blanking screw and adjust flow regulating screw as described above

Spare Parts



PRV
Pressure Relief Valve



TW-BF-HF
Drink Safe™ Fixed Spout
Bottle Filler



74-08-0106
Battery for Electronic
Piezo Button



CWU-INT
Refrigerated Chiller Unit

Specifications for CWU-INT Chiller Unit

	CWU - INT
Height	485 mm
Length	335 mm
Width	185 mm
Dry Weight	15.4 kg
Water Tank Capacity	3.6 Litres
Initial Draw Off	4.5 Litres
Water Tank Safety Pressure Relief Valve	700 kPa
Litres per minute of Chilled Water @ 350kPa	15 Litres per hour cold water supply (14 min recovery time)
Compressor	Hermetically sealed with automatic over load
Condenser	Fan assisted
Temperature Control	Capillary controlled factory pre-set thermostat
Thermostat Pre-Set	5 Degrees Celsius (+2)
Power Supply	10 amp power cable and plug
Capacity	1 / 6 HP
Power	165 Watts
Optimum Ambient Operating Temperature	2 - 30 Degrees Celsius
Incoming Water Temperature	17 Degrees Celsius
Chilled to	8 - 10 Degrees Celsius
Minimum Working Pressure	200 kPa
Maximum Working Pressure	800 kPa
Water Inlet	6 mm PE Push in Fitting
Water Outlet	6 mm PE Push in Fitting
Optimum Quantity of Serviced Taps/Bubblers	2
Chilled Cups per Hour (Cup size 175ml)	85

Troubleshooting and Maintenance for CWU-INT

SYMPTOM	CAUSES	ACTION
No Water	Water supply	Check main supply
Water not cold	<ul style="list-style-type: none"> Loss of gas Failed fan 	Contact manufacturer
	No power supply	Check and test power supply
	Poor ventilation	Clean cabinet louvers (if fitted) and condenser fins. These units need ventilation

- **Cleaning:** The coil in front of the unit must be kept clean. Check on a regular basis i.e., weekly and should be dusted and vacuumed. The vents on the side of the unit should be free from dust or lint and checked on a regular basis. The cover itself should be wiped over with a damp cloth.
- When servicing/cleaning the unit **please be aware** that the unit is pressurised and contains gas.

Care and Maintenance

Cleaning: The coil at the front of the unit and the vents on the side must be kept clean from dust and lint. Regular checks of the unit should be conducted on a weekly basis and cleaning carried out as necessary by dusting with a soft brush and/or vacuuming. A damp cloth can be used to wipe the exterior cover down. Excessive build up of foreign material will result in poor ventilation, causing the compressor to overheat and drinking water to increase in temperature. High pressure hoses and water jets should never be used to clean chiller units.

Stainless steel products should be kept clean at all times. The secret to stainless steel's ability to maintain a high quality finish and promises of a long life expectancy is the invisible chromium-oxide film that sits on the surface and protects the steel beneath. To maintain this film it is essential that the surface remains clean and in constant contact with oxygen. If this film is penetrated (either by abrasion or chemically) and dirt, liquid, grime contaminants embed themselves in these micro chasms for an extended period of time, the chromiumoxide film will not be able to regenerate and the steel below will eventually become damaged and discoloured.

What we recommend for general cleaning and maintenance:

Cleaning Materials:

- A soft cloth
- A soft-bristled brush
- A natural or artificial sponge

Cleaning Solutions:

- Hand washing soap / soft water solution
- Mild soap / soft water solution
- White vinegar / soft water solution

It is recommended that general cleaning of stainless steel surfaces be carried out weekly, or as soon as a build up of surface media has been observed. To clean, simply wash stainless steel surfaces with, warm, diluted, mild soapy water using a cloth or soft bristled brush. Once all dirt, oil and grime is removed, rinse thoroughly with clean water and wipe dry.

Do NOT - use a metal brush or steel wool to clean stainless steel. Ever. These tools will scratch the surface as well as potentially leave behind steel fragments that can go rusty and cause the stainless to discolour. Using these materials will void the warranty.

Do NOT - use scourers of any kind that have previously been used on ordinary steel. Microscopic steel fibers transferred onto stainless steel can cause considerable damage to the surface and will void the warranty.

Do NOT - use abrasive cleaning brushes, pads or agents on highly polished finishes

Do NOT use harsh cleaners that contain powerful acidic or alkaline chemicals such as hydrochloric acid and sodium hydroxide that will damage the surface. Any water coming into contact with stainless steel, particularly cleaning solutions, should have zero chloride content as even minute amounts can cause damage. Using these cleaners will void any product warranty.

Do NOT - use chlorinated sanitizers, cleansers or bleach of any kind. Using these substances will void the warranty. Despite some cleaners displaying the text, 'Suitable for Toilets and Urinals' this is more likely in reference to ceramic/vitreous China products and use of these cleaners can damage stainless steel and will void the warranty.

Do NOT - use brick cleaning liquids that contain hydrochloric acid anywhere near stainless. If cement needs to be removed from stainless (before it sets), a mixture of hot water and 25% vinegar or 10% phosphoric acid can be effective. Once cleaned, the surface should then be neutralised with dilute ammonia or sodium bicarbonate then rinsed and dried

Warranty

The BRITEX product is backed by our manufacturer's warranty available for download from our website at www.britex.com.au. We expressly warrant that the product is free from operational defects in workmanship and materials for the warranty period indicated on the schedule in the manufacturer's warranty. During the warranty period, BRITEX will repair or replace any defective products manufactured by BRITEX at no charge, provided that the terms of the manufacturer's warranty are followed.

This warranty is the only warranty given by BRITEX, and we expressly disclaim all other warranties, including but not limited to implied warranties of merchantability and fitness for a particular purpose. This warranty represents the sole and exclusive remedy for breach of warranty, and BRITEX shall not be liable for any incidental, special, or consequential damages, including lost profits, labor charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances beyond BRITEX's control.

This warranty shall be void if the product is abused, misused, improperly installed, maintained, or altered. By purchasing our product, you agree to these terms and conditions. We appreciate your business and look forward to providing you with high-quality products and services.



MELBOURNE
Britech Place Mira Crt
Bundoora VIC 3083
t (03) 9466 9000
e vic@britech.com.au

SYDNEY
16 Northumberland Drv
Taren Point NSW 2229
t (02) 9531 2100
e nsw@britech.com.au

PERTH
Unit 1/8 Principal Link
Malaga WA 6090
t (08) 9249 5464
e wa@britech.com.au

BRISBANE
19 Manilla St
East Brisbane QLD 4169
t (07) 3363 2400
e qld@britech.com.au

ADELAIDE
The Britech Group
SA State Office
t 1300 764 744
e sa@britech.com.au