
Wudu Foot Wash Trough

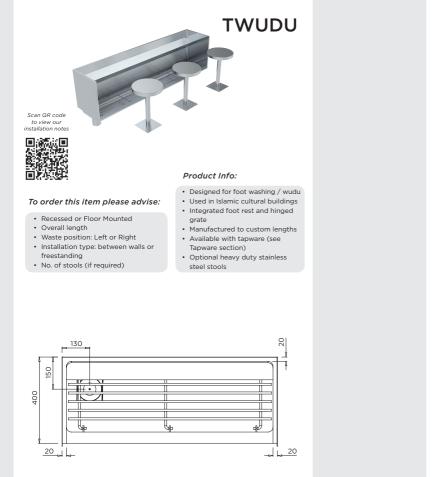


INSTALLATION NOTES


1) A pliable mortar bed (slurry) is recommended to support trough tray and prevent flexing. 2) If trough is to be recessed into the floor, we suggest a cut out of 440mm Wide x 90mm Deep x Trough Length. 101mm (OD) tube dropper outlet provides optimal drainage. 3) For troughs installed between walls, tile edges are supplied to all sides for sheeting over before finishing walls. 4) Freestanding troughs are supplied without any tile edges.



Due to ongoing research and our commitment to product development, details are subject to change without notice. Details accurate at time of print

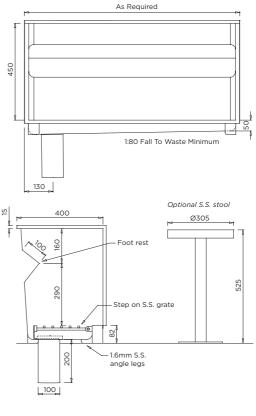

TWUDU Floor Mounted Model

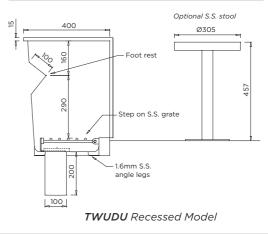

Last Revised 2019

Please refer to britex.com.au for the most current product information

Allow +/- 5mm tolerance for dimensions and setouts shown in product literature