
Laboratory Bowl

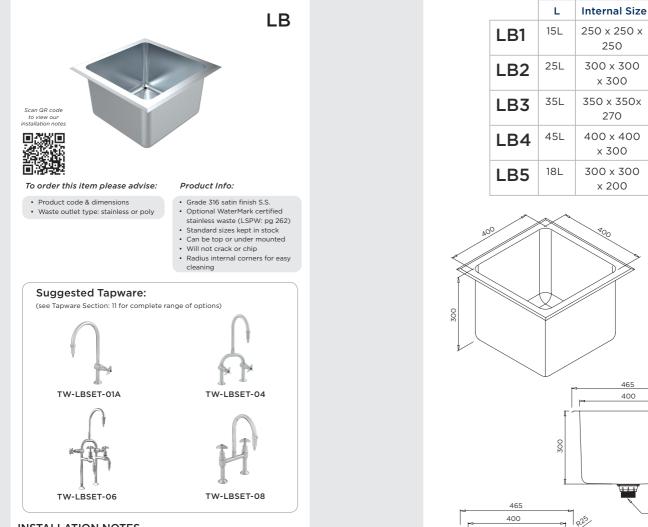

INSTALLATION NOTES

1) Lab bowl is generally top mounted in a joinery bench. 2) Cut out for bowl is overall L x W dimensions (including end flanges) minus 20mm, which leaves a 10mm overhang on all four sides for mounting on bench top. 3) Fixing clips are tightened to locate and secure integral studs to the inside of the cutout. 4) A silicon sealant or adhesive tape can be applied to the underside perimeter of flange for additional sealing and securing where required. 5) If under mounting, fixing holes will need to be pre-drilled in the bowl flange, silicon sealant applied, then screwed through to underside of substrate. 6) 50mm polypropylene waste supplied standard. 7) Grade 316 stainless waste supplied only where requested.

OBRITEX

Due to ongoing research and our commitment to product development, details are subject to change without notice. Details accurate at time of print

call us on 1300 764 744

32

COMMERCIAL SINKS

50mm waste

LB4 Shown

Please refer to britex.com.au for the most current product information

Allow +/- 5mm tolerance for dimensions and setouts shown in product literature

Last Revised 2019

465 400